





**DIAGRAM 5= CONNECTION SYSTEM FOR PROGRAMMING
EITHER OF THE ANYSCENE MEMORY UNITS.**

DMX DESK TO BE CONNECTED FOR PROGRAMMING ONLY

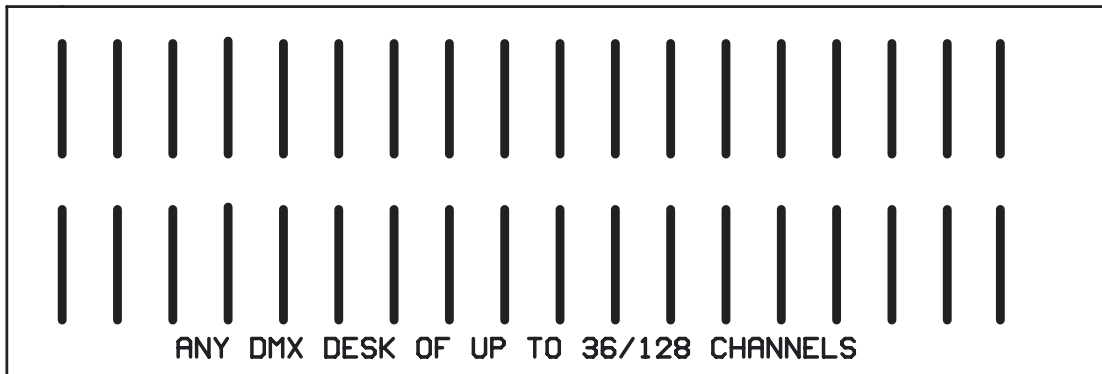

PLEASE NOTE: PART No K178 MUST ALWAYS BE ORDERED WITH AN ANYSCENE.
THIS CIRCUIT BOARD CAN BE FITTED INTO EITHER THE 192
SERIES OF PRODUCT OR THE CONTRACTOR RANGE. THE SEPARATE
POWER SUPPLY IS NOT NEEDED UNDER THESE CIRCUMSTANCES.

DC POWER SUPPLY
9>25v 300mA
(K121C= UK)
(K126C= EURO)

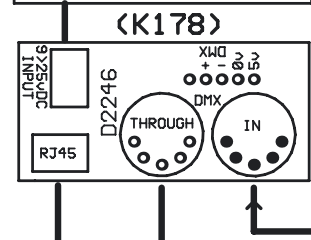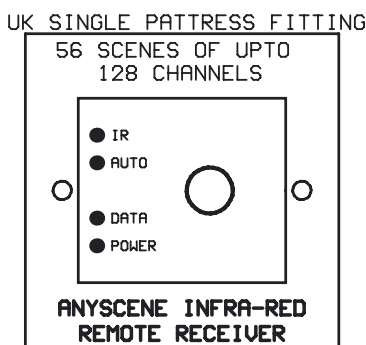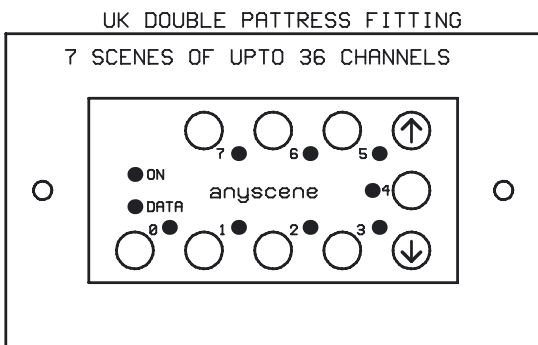

**RJ45 LEAD TO EITHER THE PUSH BUTTON ANYSCENE OR THE INFRA-RED
REMOTE CONTROLLED ANYSCENE** (THE ANYSCENE IS A DMX SNAPSHOT RECORDER)

