



ANYTRONICS.COM

PROFESSIONAL
Dimming/Switching

PRO-DIM OUTSTATION



- Stylish and easy to use preset controller primarily for use with Pro-Dim Slave Dimmers.
- Four preset dimming levels selected at the touch of a button.
- Standard UK double patress fitting available in a variety of architectural finishes.
- Preset fade rate between 5 seconds and 5 minutes.
- System expandable up to four linked outstations.
- Full status indication on all outstations.
- Three wire connection to Pro-Dim dimmers.
- Simple non-volatile setting of preset levels and fade rate.
- Compatible with all Anytronics analogue input dimming systems.

Standard architectural surrounds.

Finishes shown: Brushed Aluminium, Brass, & Chrome.



Flush mounted designer architectural surrounds.

Finishes shown: Chrome, White & Brass.



Tel: +44 (0)23 9259 9410 Fax: +44 (0)23 9259 8723 e-mail: sales@anytronics.com

TV STUDIOS | THEATRE | SCHOOLS | CINEMA | ENTERTAINMENT | ARCHITECTURAL | OFFICES & RETAIL

© Anytronics Limited 2003. Anytronics and Anycolour are Registered Trademarks of Anytronics Limited. UK patents applied for. Anytronics reserve the right to change the specifications without notice at any time.



Anytronics Pro-Dim Outstation

Anytronics Pro-Dim outstations provide momentary action under surface switching control of lighting levels when using Anytronics dimmers. Though designed primarily for use with the Anytronics Pro-Dim slave dimmers, they can also be used to control individual channels of other Anytronics analogue input dimmers. The outstations come in two versions :-

Master outstation - for direct connection to the dimming pack. This outstation has the controls which set the four required dimming levels (corresponding to the four preset levels) and another which will set the fade rate between these preset levels.

Slave outstation - up to three of these units can be connected back to the Master outstation. These will allow users to call up the settings on the Master Outstation from different locations on a 'last button pressed takes precedence' basis.

Connections

Only one Master Outstation should be connected to a dimming channel in each system. This connection is by a three wire interface connected to the three way screw terminal on the back of the outstation as follows :-

Outstation		Pro-Dim		Dimmer
0V	to	0V	or	0V
Control	to	Control 1	or	Channel Input
10V	to	+10V	or	+10V

Up to three further slave outstations may now be connected to the Master using the six way screw terminal or the RJ12 interconnection system (using 6 way telephone cable). The outstations are connected by paralleling pins 0V to 0V, 1 to 1, 2 to 2 etc back to the Master outstation. It is a good idea to check your connections by making sure that each button calls up the correct preset on all outstations.

Setting up

All settings are made on the Master outstation.

The fade rate between preset levels is set by the potentiometer control in the corner of the PCB which is labelled ' Fade Rate'. This is factory set for about 30 seconds, but can be set in the range 5 seconds to 5 minutes by adjusting the control. To minimise delays whilst setting up it is advantageous first to reduce the fade rate to its minimum value.

The other four preset potentiometers (labelled 'Level 1,2,3,4 preset') control the output levels corresponding to the four switch positions. Bear in mind that on powering up the unit, preset 1 will always be selected. The factory settings for presets 1 to 4 are approximately 0, 30, 60, 100% respectively. To change these, first select the preset level by pressing the corresponding switch on the other side of the unit. Then adjust the level required for that preset (allowing for delays due to the fade rate setting).

Finally, set the fade rate to the desired value and check its operation by switching between presets.

Anytronics Limited
Units 5 & 6,
Hillside Industrial Estate,
London Road, Horndean,
Hampshire, PO8 0BL
Tel: +44 (0)23 9259 9410
Fax: +44 (0)23 9259 8723